 


Overview

JBL Synthesis is releasing software version 1.0.0 for the DANTE module in the JBL Synthesis SDP-58 & SDR-38.

Upgrading DANTE Firmware

1. To update the module, the Audinate Firmware Update Manager which is included in the update package needs to be installed.
2. Connect the SDP-58 or SDR-38 to the network using the primary or secondary Dante Ethernet connections (NOT the ETHERNET connection).
3. Power on the unit.
4. Press and hold the “MENU” button on the front panel, NOT the remote control, to enter the engineering menu and set the DANTE enable option to On.

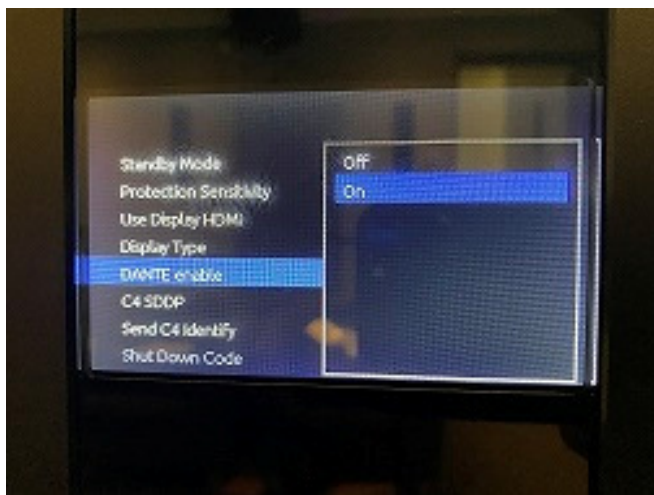

5. Connect the PC to the same network as the JBL receiver or processor that is to be updated.



 
8500 Balboa Boulevard, Northridge, CA
91329

DANTE MODULE v1.0.0 UPDATE INSTRUCTIONS


JULY 12, 2022

Page 2 of 3


6. Run the Update Manager. When the updater opens click choose the Ethernet network interface and click next.

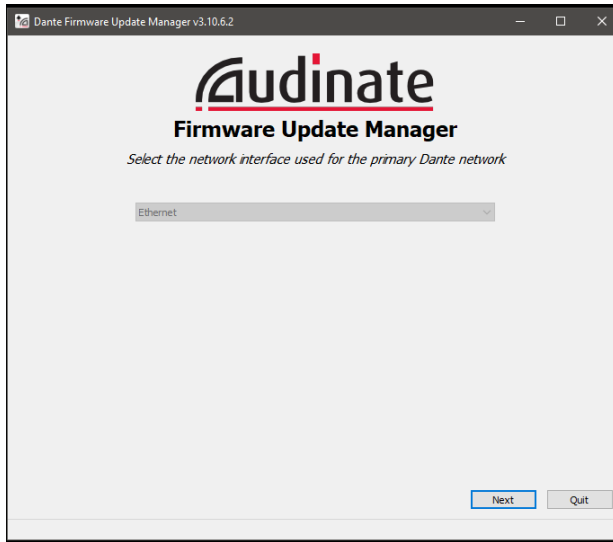

 
7. Click the Update DANTE Firmware option.

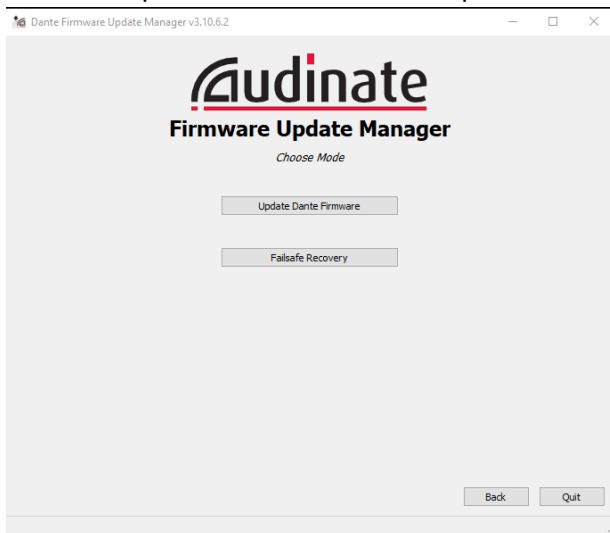

 8. Select the .dnt file that is included in the update package. Ensure the check box for “Override Device Matching” is checked.

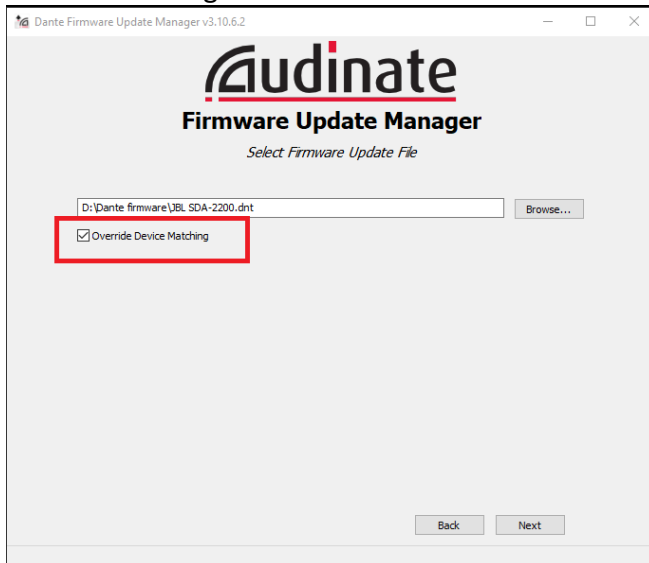

9. The updater will go and find all the DANTE products that are connected to the network. Select the product you wish to update and click start.

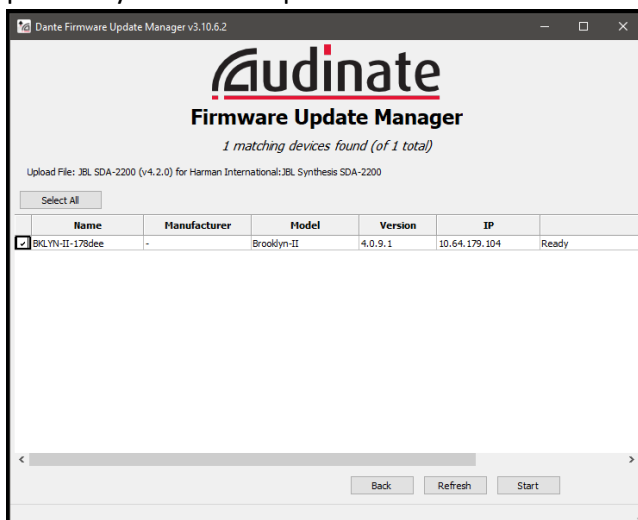

10. Once complete you will be prompted to restart the product for the firmware to finish installing. Once power cycled the procedure is complete.